

AutoShack Weekly Tip



- The cabin air filter filters the outside air coming into the passenger compartment.
- It removes cold, asthma, allergy-cause agents from the air.
- Replace your cabin air filter once a year or every 15,000 miles (24,000 km).
- If you live in dusty terrain, replace twice a year or every 7500 miles (12,000km).
- It's usually behind the glove box on the passenger side of the vehicle (See photo on next slide).

CLEAN VS DIRTY CABIN AIR FILTER



CABIN AIR FILTER IS BEHIND GLOVE BOX



ACCESS BACK OF GLOVE BOX



FILTER IS INSIDE THIS CASE. INSTALL NEW FILTER HERE.



- Click the links below to visit/contact us to learn more about us and how we might be able to assist you.
 - t: +1-517-962-0616
 - e: autoshackghana@autoshackghana.com
 - w: www.autoshackghana.com
 - mw: m.autoshackghana.com
- A majority of the tip topics are suggested by others based on their experiences.
- Consider helping others to benefit from your experiences by suggesting a topic for our tip bank based on your car troubles, experiences or observations.